 


LCD ADVERTISING DISPLAY

DSPL7M/DSPL7MS/DSP102M/DSP104M

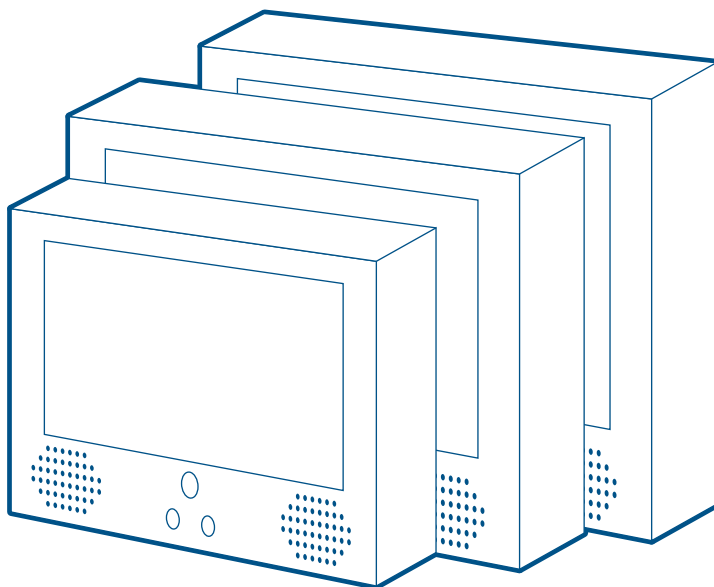

User Manuals

Please read this instruction before installation.

IMPORTANT SAFETY INSTRUCTIONS

Read this user manual

All safety and operating instructions in this user manual should be read before operating the product

Keep this user manual

This user manual should be retained for future references.

Head Warnings

Be cautious about warning signals on the product.

Follow Instructions

Please follow instructions in this user manual

Attachments

To avoid danger, please do not use attachments not recommended by the product manufacturer.

Mounting

Do not place the product on any unstable cart, stand, tripod or table to avoid injury on children and adult. Please only use attachments indicated by product manufacturer.

Temperature

Please use this product within operating temperature 32°F ~ 100°F (0°C ~ 45°C), relative humidity 20%-80%. The product should be situated away from any heat source such as radiators, heat registers, stoves or other products (including amplifier) to product heat.

Avoid Liquid Invasion

Avoid the invasion of any liquid. Avoid placing it near bathtub, sink, kitchen, wet basement or swimming pool. Do not place product on any uneven surfaces and keep a distance of at least 6 inches from wall. Do not place heavy objects on top of the unit and at sealed areas to avoid heat ventilation problems.

Product Protection

Please do not place any attachment or parts inside the product to avoid contacts with voltage points that could result an electric shock or fire.

Heat Ventilation

There is no heat ventilation on the upper and lower part of the product, therefore to avoid over heating, please do not block any ventilation openings with objects (e.g. carpet). Please allow the opening to have 10cm distance for ventilation.

Grounding or Polarization

This product could be equipped with an alternate plug.

Power –Cord Protection

Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed upon them. Pay attention to the connection of plugs.

Power Sources

This product should be operated only from the type pf power source indicated on the rear panel. If you are unsure of the type of power supply to your home, consult your product purchaser or local power company.

IMPORTANT SAFETY INSTRUCTIONS

Lightning and storms

Unplug the outlet during lightning, storms or long unused periods. This will prevent damages and power surges to the product.

Overloading

Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

Damage Handling

Unplug this product from the outlet of wall and request qualified service personnel under the following conditions:

- when the power supply cord or plug is damaged
- when the picture display gets dimmer
- when liquid has been spilled or objects have fallen on to the product
- when the product has been exposed to rain or water.
- Adjust only those controls that are in the instruction manual. For improper adjustments may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- When the product exhibits a distinct change in performance-this indicates a need for repair service.

Replacement parts

When replacement parts are required, be sure that the technician uses replacement parts specified by the manufacturer or parts with same features. Unauthorized substitution may result in fire, electric shock or other hazards.

Safety Check

Upon completion of any service or repair to this product, ensure technician for proper operating condition performs safety checks.

Warnings

If the battery of remote control is incorrectly replaced, there will be a danger of explosion.

Storage

Keep the product in dim areas, room temperature and low humidity to maintain original condition. This will avoid danger.

Transportation

Since the product consists of glass and delicate electronic components, excessive shock or drop will result damages. Please handle the product carefully to minimize shock during transportation.

Recycling

The product utilizes tin-lead solder, and has a fluorescent lamp containing a small amount of mercury. For environmental considerations, disposal of these materials may be regulated in your community. For disposal or recycling information, please contact your local authorities, or Electronics Industries Alliance: <http://www.eiae.org/>

 
Cleaning

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.

Spec. & Package

Package included:


-Please confirm all the items is included before the setup start.

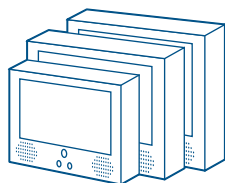

LCD ADVERTISING DISPLAY




 Remote Control

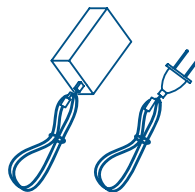

Adapter & power cord

 **Please check the battery before operating*

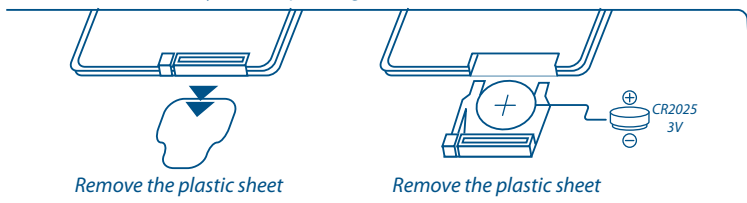


Remove the plastic sheet

Remove the plastic sheet


3

Spec:

Model			
Resolution	7" (800 x 480 pixels)	10.2" (800 x 480 pixels)	10.4" (800 x 600 pixels)
Brightness	250cd/m ²		350cd/m ²
Contrast	500:1	300:1	400:1
Support card	CF CARD or SD CARD , USB 2.0 (PLUG N PLAY)		
Document support	JPEG, MPEG4-Xvid/Divx (.avi) 720x480/ 25fps/ 3000kpbs		
Adapter input	100-240V 50/60Hz 0.7A		
Adapter output	12V __2A		
Nrp	9W	12W	14W
Int. Standard	CE, FCC, RoHS		

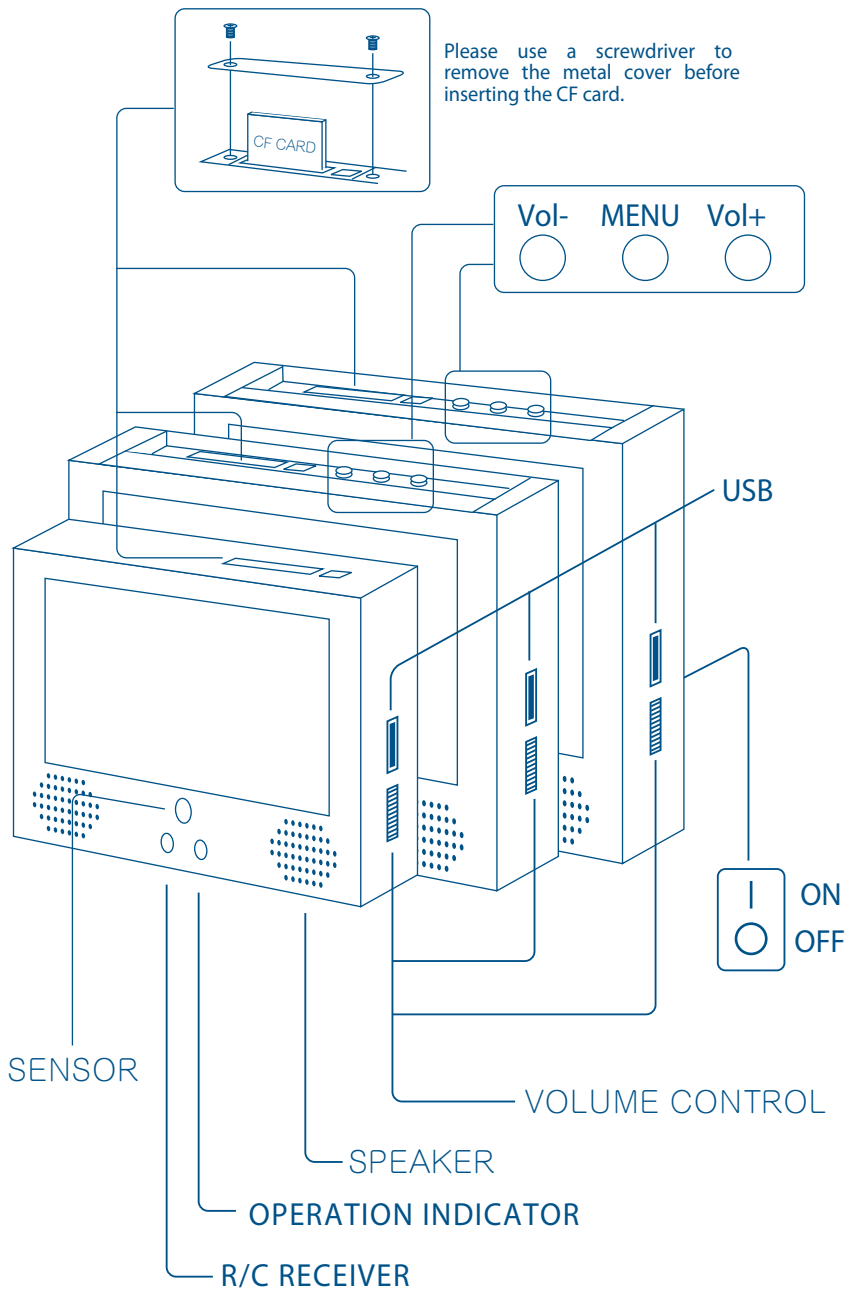 

INTRODUCTION - Remote Control

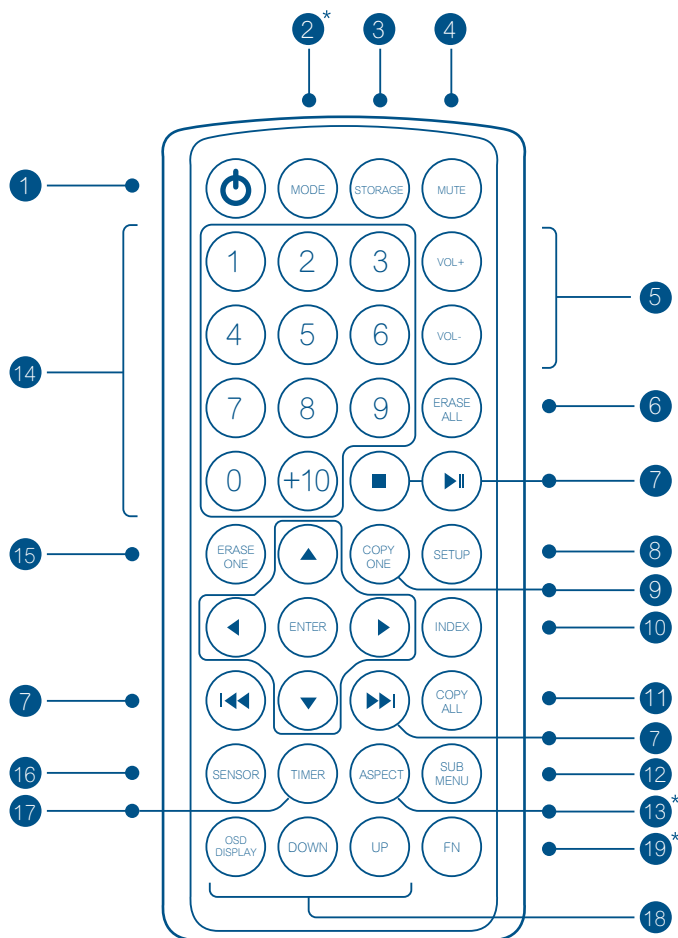 


- | | | |
|-------------------------|-------------------------|---------------------|
| 1 Power On/off | 3 Storage Switch ~ Pg.6 | 4 Sound mute ~ Pg.6 |
| 5 Volume up/down ~ Pg.6 | 6 Erase all ~ Pg.6 | 7 Playback ~ Pg.6 |
| 8 Setup ~ Pg.7 | 9 Copy one ~ Pg.7 | 10 Index ~ Pg.7 |
| 11 Copy all ~ Pg.7 | 12 Sub menu ~ Pg.7 | 14 Keypad ~ Pg.6 |
| 15 Erase one ~ Pg.7 | 16 Sensor ~ Pg.7 | 17 Timer ~ Pg.6 |
| 18 OSD Setting ~ Pg.7 | | |

*Function not supported

Basic Control

 Connection

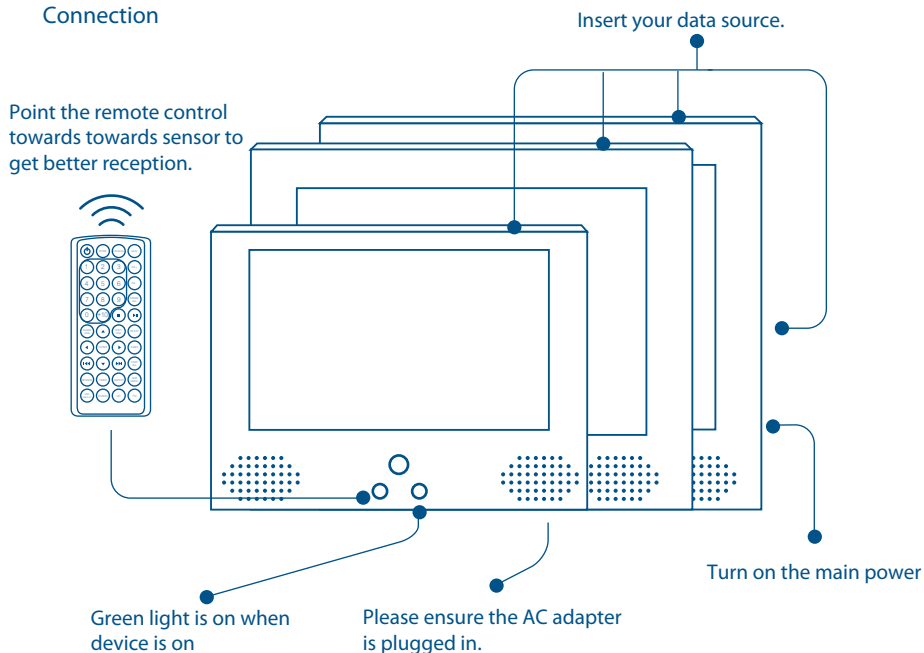

6

Power ON/OFF

Use the remote control to turn on the power.

Storage Switch

Press the storage switch button to select between the data source.

Sound Mute and Volume control

Press the sound mute button to turn off the sound. And press the to turn up or press to turn down the volume.

Erase (CF card supported only)

To erase a video in the list or when playing, Press the button to prompt the confirmation screen. Or to erase ALL of the video in the data sources, press to prompt the confirmation. Use to select between YES or NO, and press to confirm delete.

Playback

Press to stop the video when its playing. Press to pause the video, press again to resume.



To skip the video, please use to skip the video.

Hold to start fast forward or backward.

Setup

Please refer to advanced control. Pg.8

Index and sub menu

Press  to call the file list out. When you on the file list, you can press  to the file.

Sub-menu

COPY	● — Press this button to copy a file/ multiple files/folder.
TARGET	● — Press this button to paste the file that on the clipboard.
DELETE	● — Press this to delete the file that being select
RENAME	● — Press this to call up a keyboard and start to rename.
SELECT	● — Press this button to select between a single and multiple files.
NEW FOLDER	● — Press this button to create a new folder.
PROPERTIES	● — Press this button to call up the properties of the files.
CANCEL	● — Press this buttton to leave the sub-menu.

Copy

Press  to copy a specific file to another CF card. Press  to copy a specific file to another CF card. (same file name in both memory card is not supported)

Keypad

To select the video in the list, you can directly press the number instead of searching.




Timer





Press  to go to the clock setup, for further information, please go to page 12.





Sensor





Please refer to advanced control. pg.12

OSD Display

Press  to call the color, the brightness, and the contrast. Press   to adjust it.

COLOR:  -   + 

BRIGHTNESS:  -   + 

 
CONTRAST:  -   + 

Advanced Control


Setup Menu

- To enter the setup menu, press  button and press  on the controller.


- General Setup

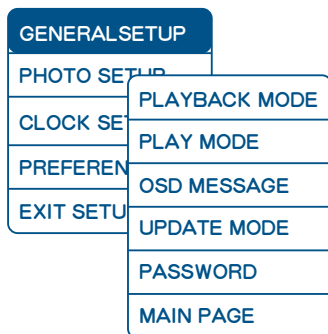

 
1. Playback Mode



 2. Play Mode

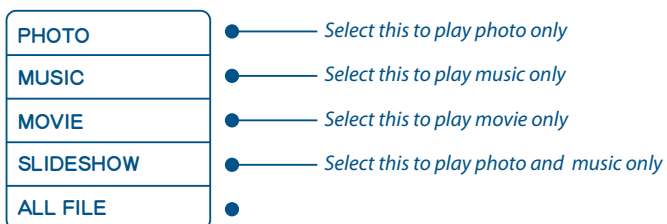

 3. OSD Message



4. Update Mode

UPDATE OFF
30 SECONDS
KEYLOCK FILE
ADD/OVERWRITE

● — Select this to turn off the auto update when USB drive is plugged in.

● — Select this to update 30seconds after the device restarts.

● — This function is designed to add / re-write file on the CF card without the remote control.

1. To add files,

- Create a file named "VIDEOADD.FLG" on your computer.
- Type "add" inside the document and save in ASCII format.
- Copy "VIDEOADD.FLG" and the files you want to add onto a USB drive.
- The system will start update once you plug in the USB drive.
(New file will be added to the CF card, file with same name will be overwritten.)

2. To re-write the CF card,

- Create a file named "VIDEOUPDATE.FLG" on your computer.
- Type "RE-WRITE" inside the document and save in ASCII format.
- Copy "VIDEOUPDATE.FLG" and the files you want to add onto a USB drive.
- The system will start re-writing the card once you plug in the USB.
(All files will be re-written by this function.)

● — This function is designed to add / re-write file with the remote control.

ADD
OVERWRITE

● — New file will be added to the CF card when you select this.

● — CF card will be re-written when you select this.

5. Password

ON
OFF
NEW PASSWORD

● — Password required when memory card detected, update and setup button pressed

● — Select this to turn off password protection

● — Select to change your password


INPUT OLD PASSWORD			
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
SURE		CANCEL	

Input the old password and press sure.
(Default is 1234)

INPUT		NEW	
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
SURE		CANCEL	

Input the new password and press sure to confirm.

 - Photo Setup

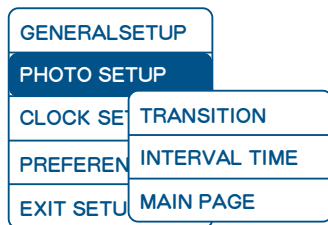

1. Transition


FULL SCREEN		RIGHT -> LEFT	
TOP -> BOTTOM		L/R -> CENTER	
BOTTOM -> TOP		CENTER -> L/R	
T/B -> CENTER		IMPLODE	
CENTER-> T/B		BLIND -> L/R	
BLIND:T->B		CROSS FADE	
LEFT -> RIGHT		RANDOM	

2. Interval Time

1 SECOND
3 SECONDS
5 SECONDS
10 SECONDS

Set your interval time between 1, 3, 5 and 10 seconds.

 • Clock Setup

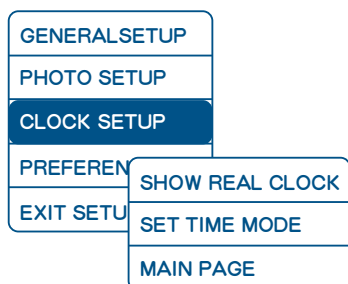

1. Show real clock

 
ON
OFF

Set turn ON to display the clock and turn OFF to disable the clock.

2. Set time mode

DAILY
WEEKLY
OFF

- Set device to turn ON/OFF daily at the same time.
- Set device to turn ON/OFF daily at different times.
- Turn off this function

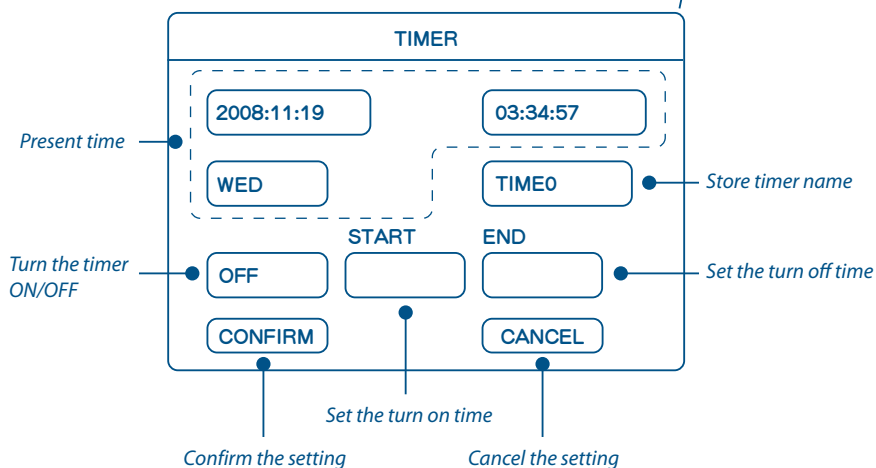

• Preferences

GENERAL SETUP	
PHOTO SETUP	
CLOCK SETUP	OSD LANG
PREFERENCES	AUTO PLAY
EXIT SETUP	SENSOR
	DEFAULTS
	MAIN PAGE

1. OSD Lang

ENGLISH
FRENCH
GERMAN
ITALIAN
SWEDISH
DANISH
PORTUGUESE
SPANISH

Select to change the language of the interface.

2. Auto Play

ON
OFF

● Turn on to play contents on CF card automatically once its plugged in.

● Turn off to play CF card content manually.

3. Sensor

POWER ON
30 SEC
45 SEC MUTE
90 SEC
360 SEC

● Select this option to keep the device on.

● Device will standby after 30sec., and wake up when sensor is activated

● Device will turn off the sound after 45sec., and wake up when sensor is activated.

● Device will standby after 90sec., and wake up when sensor activated

● Device will standby after 360sec., and wake up when sensor is activated

4. Defaults

FACTORY SET

● — Press ENTER to go back to factory setting

- Exit Setup

Select this to leave the menu setup.

Trouble shooting

- The image is too dark or fuzzy

- Please inspect brightness, contrast and the color levels for optimum conditions.

- Reload the file on the CF card.

- Check for damage to the LCD.

- File doesn't play back

- Please make sure the file is supported (see compatible files).

- Please make sure the file is not damages.

- Reload the file onto the CF card , restart the device and try again.

- Remote Control has no response

- Please make sure the battery has a charge/ Point at IR sensor on device.

- To test remote, use digital camera LCD to look at IR sensor for light when pressing buttons.

- Please double check there is no third party signal affect the sensor.

Please contact our customer service if you face any problems on operating the device.